 





SIGMA 650

TEMP DIGITAL DISPLAY
DUAL-TOWER COOLER

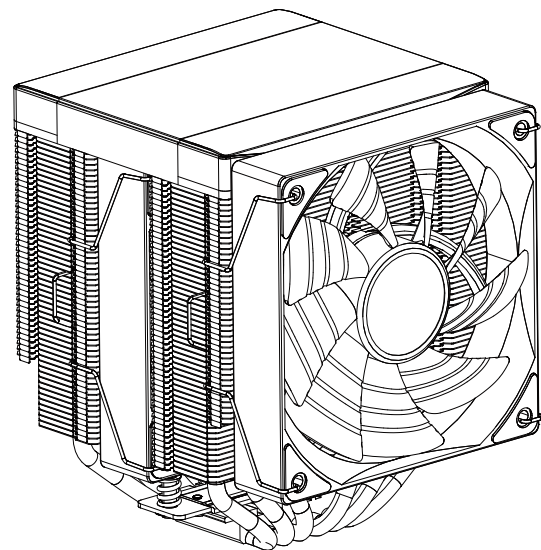


USER MANUAL

 
Intel LGA1851/1700/1200/115X

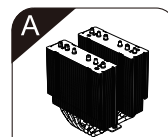


Radiator

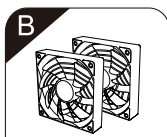


Fan

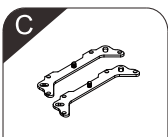

Universal
Bracket

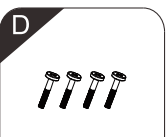

Intel Screws

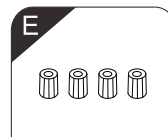


LGA1851/1700
Spacer




LGA115X/1200




Buckle Strip

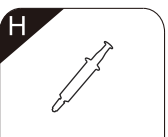

Thermal Grease

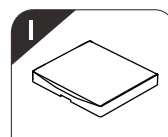


Magnetic Cover

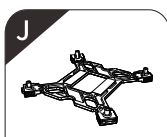


Intel Backplate


Intel LGA1851/1700/115X/1200

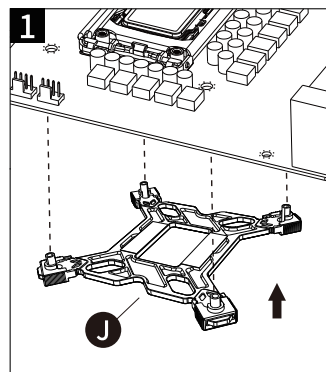


Fasten the intel backplate
to the back of the motherboard

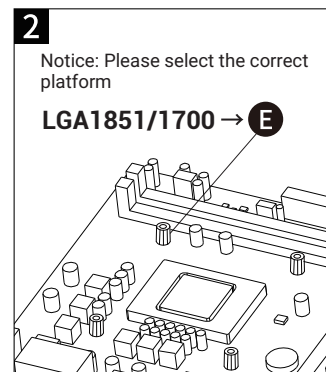

Place 1851/1700 spacer on the
front of the motherboard

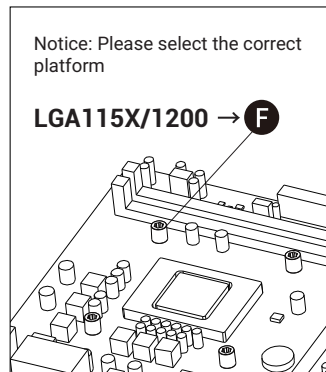


Place 115X/1200 spacer on the
front of the motherboard

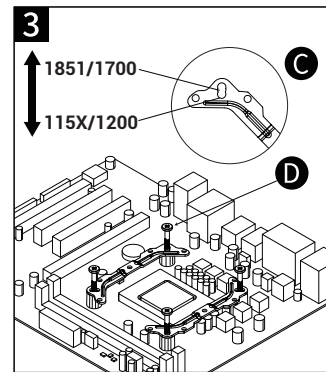


Use intel screws to fix the
universal bracket to the spacer


Intel LGA1851/1700/1200/115X

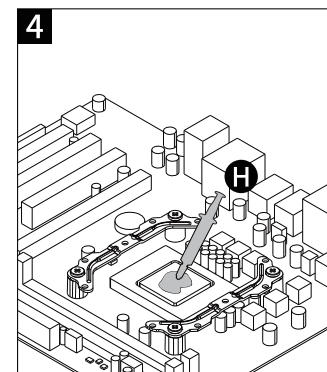


Apply thermal grease

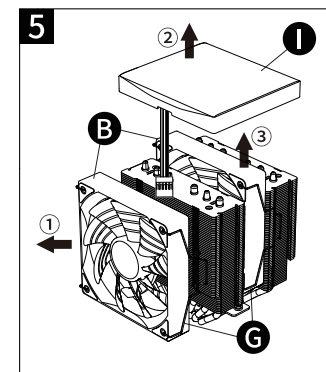

Remove the buckle strip and fan
Remove the top cover

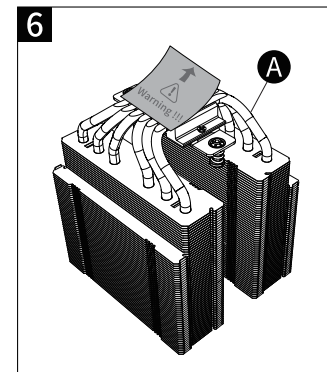


Remove the protective film

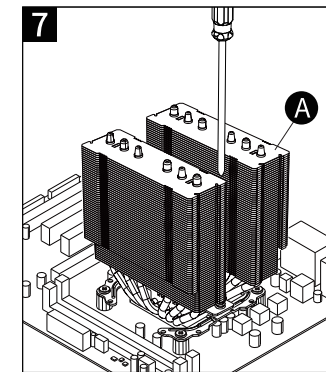


Fix the radiator to the
motherboard


Intel LGA1851/1700/1200/115X

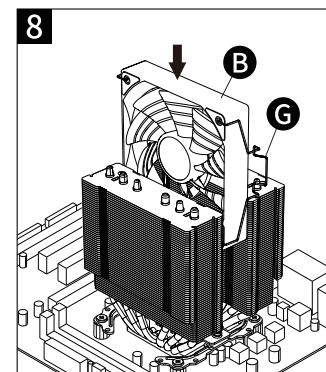

Install the inner auxiliary fan

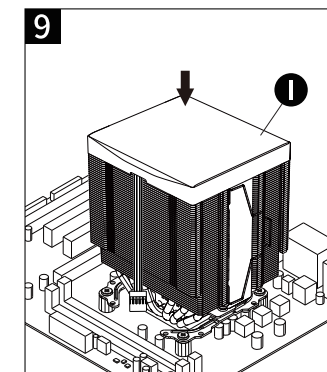

Install the top cover

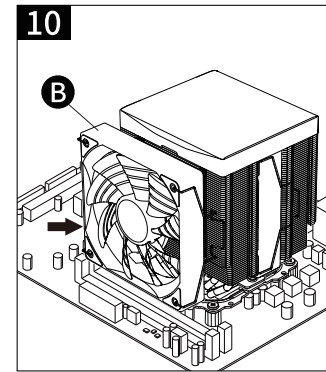



Install the outer main fan

Driver Download


SIGMA 650

For display driver software, please go to the official website:
www.gamemaxpc.com
 to find the corresponding product model and download it.
 The default installation location is drive C.
 The driver software supports Windows 10 and above.

AMD AM5/AM4/AM3

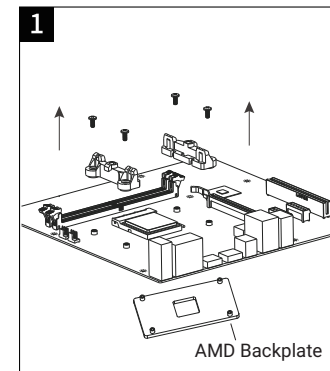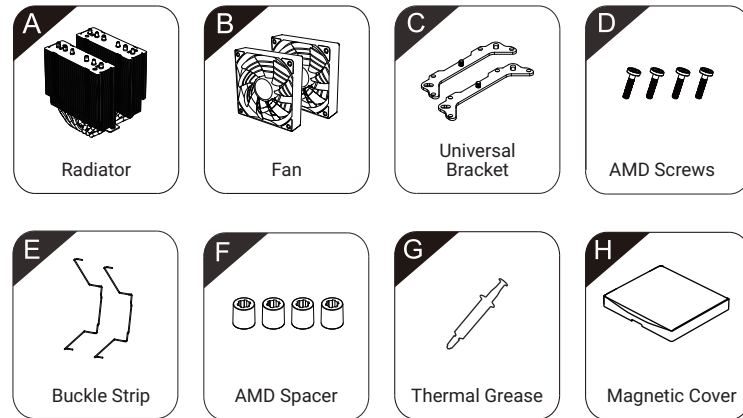


Remove the original bracket and keep the original backplate

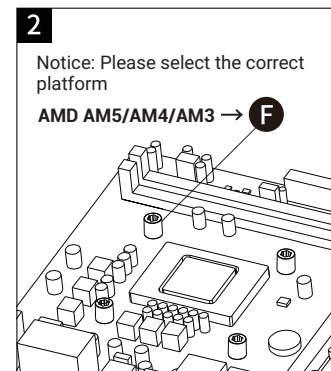


Place the AMD spacer on the front of the motherboard


AMD AM5/AM4/AM3

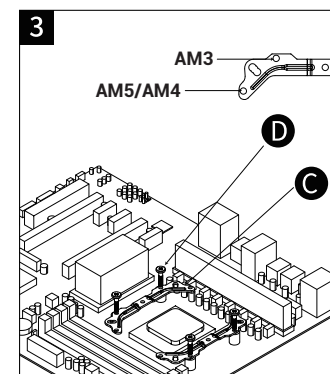


Use AMD screws to fix the universal bracket to the spacer

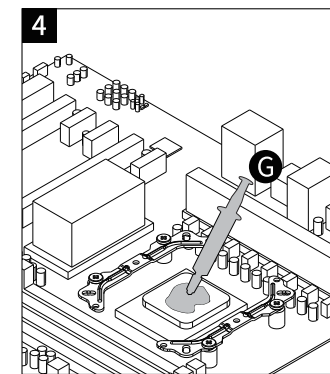

Apply thermal grease

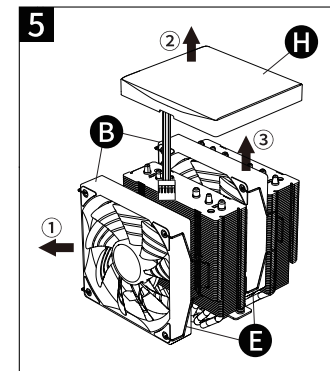


Remove the buckle strip and fan
 Remove the top cover

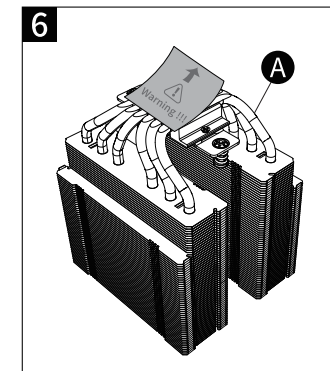


Remove the protective film


AMD AM5/AM4/AM3

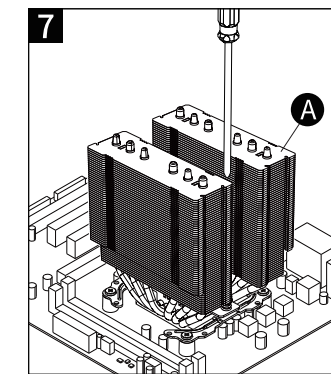


Fix the radiator to the motherboard

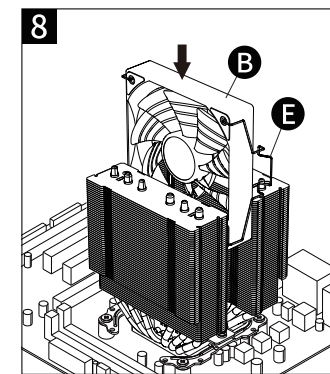

Install the inner auxiliary fan

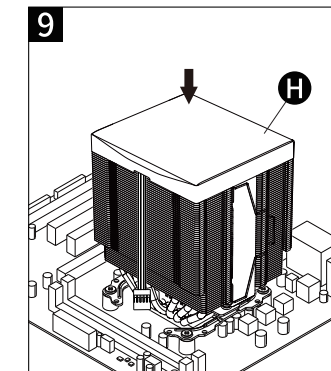

Install the top cover

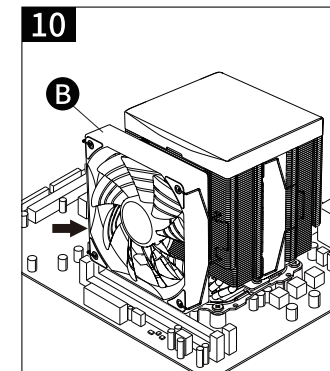

Install the outer main fan

Fan and Display Connections

