




TWIN 630


DUAL TOWER CPU AIR COOLER

USER MANUAL


Part List

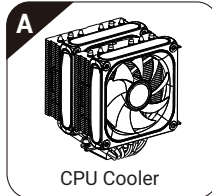


CPU Cooler

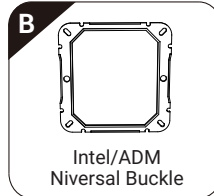


Intel/ADM
Niversal Buckle

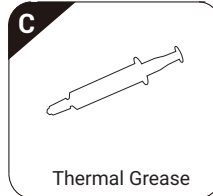


Thermal Grease

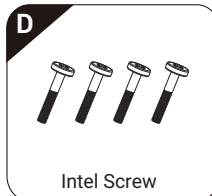


Intel Screw

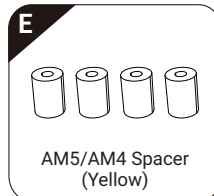


AM5/AM4 Spacer
(Yellow)

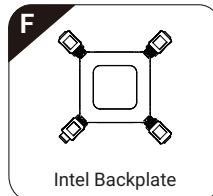


Intel Backplate

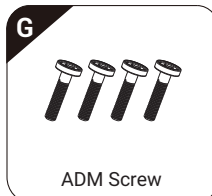

ADM Screw

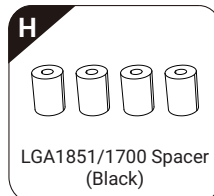


LGA1851/1700 Spacer
(Black)

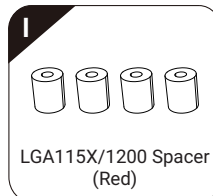

LGA115X/1200 Spacer
(Red)


Intel LGA1851/1700/1200/115X | AMD AM5/AM4

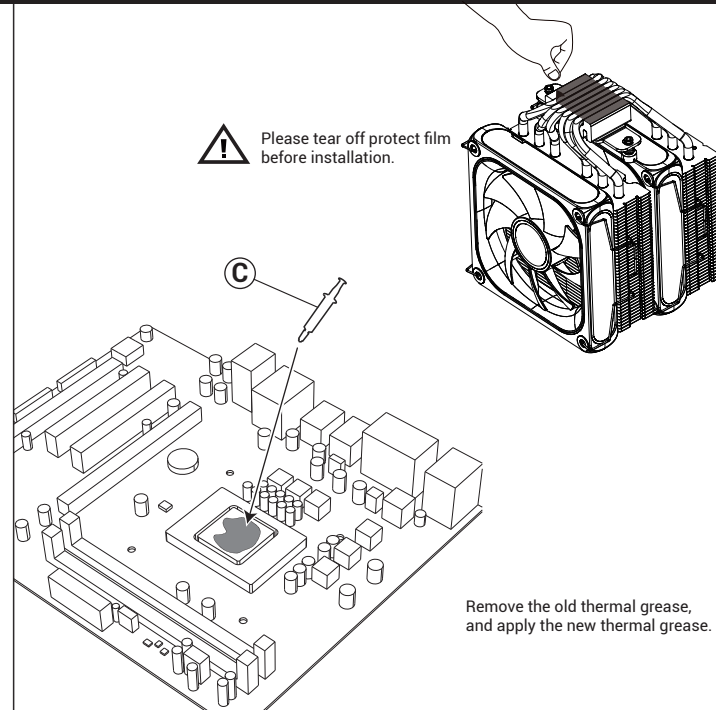

! Please tear off protect film
before installation.

Remove the old thermal grease,
and apply the new thermal grease.

Intel LGA1851/1700/1200/115X

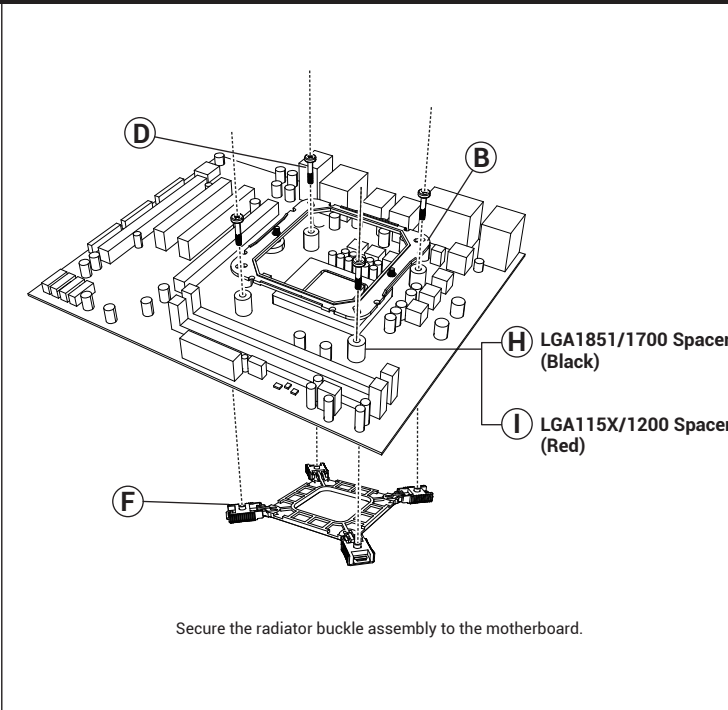


H LGA1851/1700 Spacer
(Black)


I LGA115X/1200 Spacer
(Red)

Secure the radiator buckle assembly to the motherboard.


AMD AM5/AM4

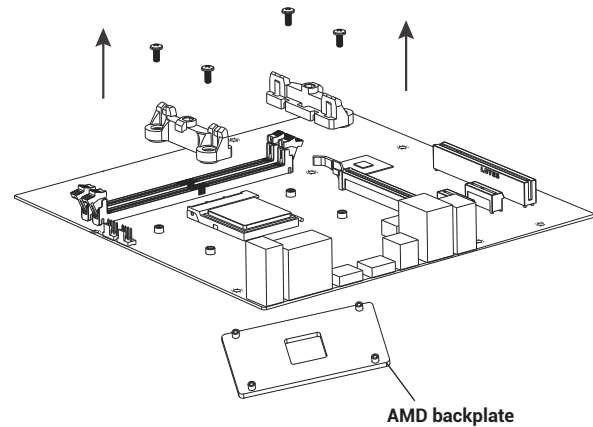

AMD AM5/AM4

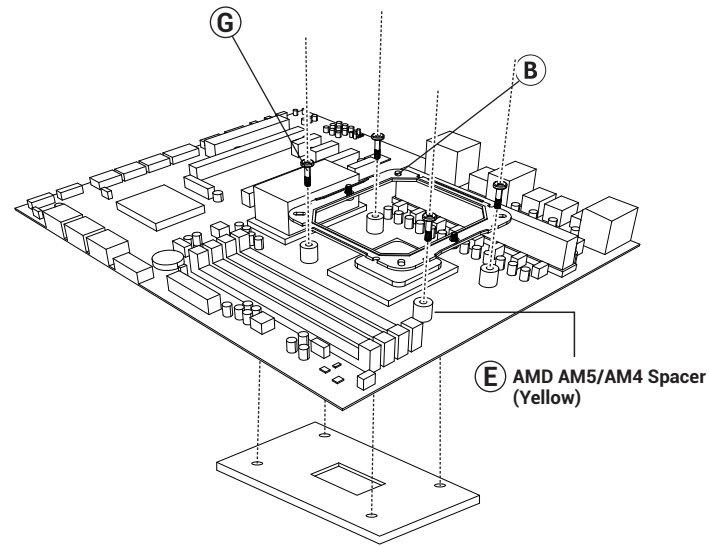

Intel LGA1851/1700/1200/115X | AMD AM5/AM4

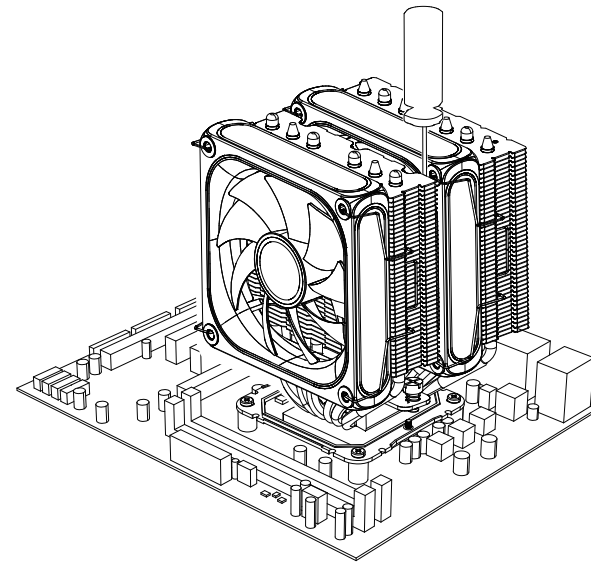

Fan and Display Connections

