





# TWIN 830

DUAL TOWER CPU AIR COOLER

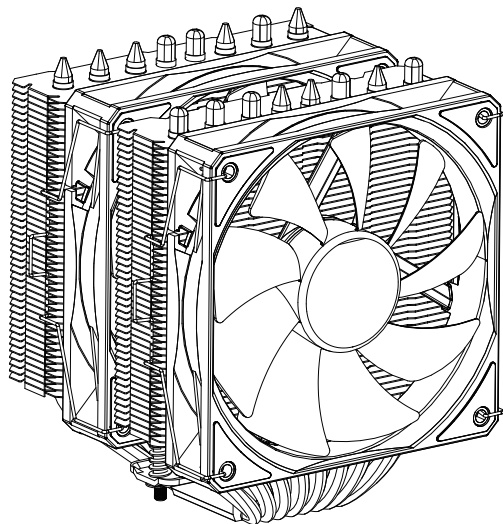


## USER MANUAL


### Intel Accessory List

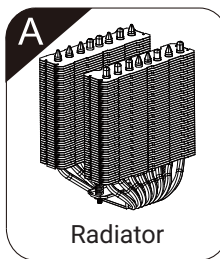


Radiator

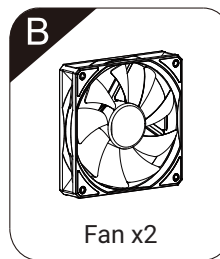


Fan x2

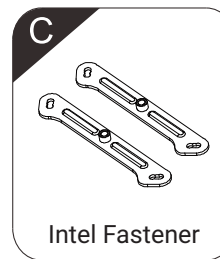


Intel Fastener

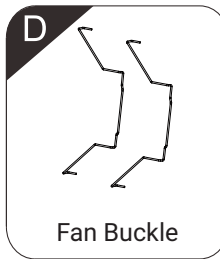


Fan Buckle

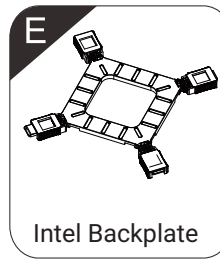


Intel Backplate

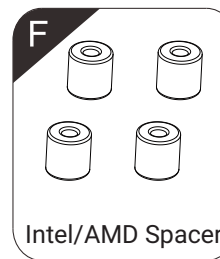

Intel/AMD Spacer

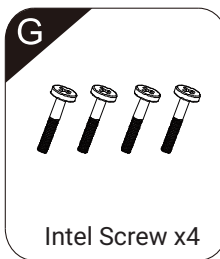


Intel Screw x4

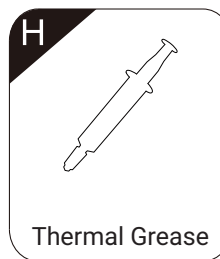


Thermal Grease


### Intel LGA1851/1700/1200/115X

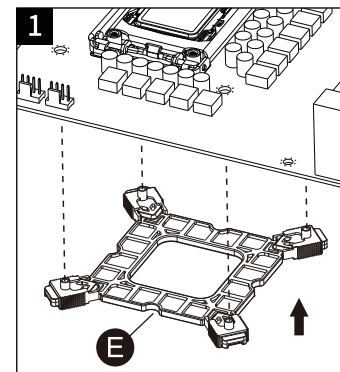


Install the intel backplate

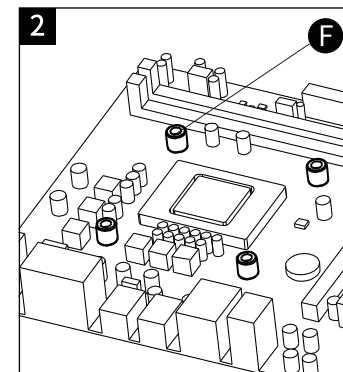

Install the intel spacer

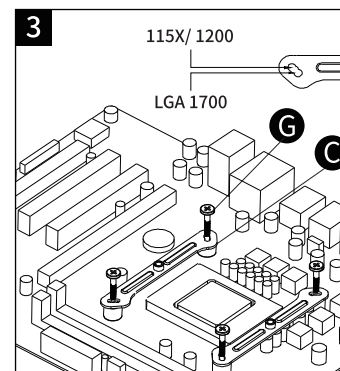


Install the Intel clamping device

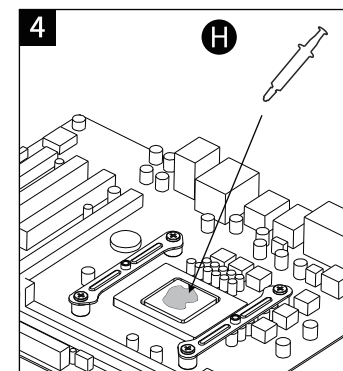


Remove the old thermal paste and apply new thermal conductive paste


### Intel LGA1851/1700/1200/115X

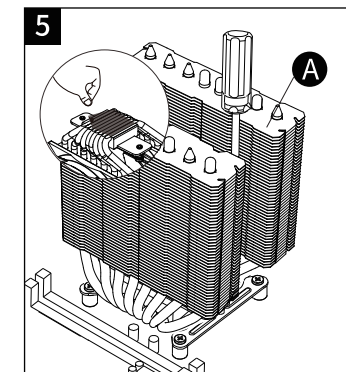

Remove the bottom protective film and install the radiator

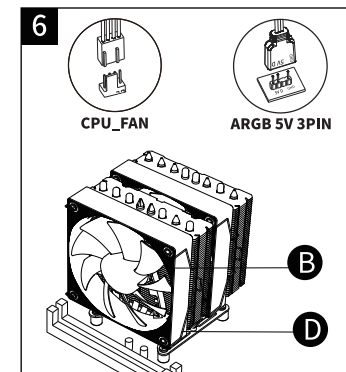


Install the fan and connect it to the motherboard interface

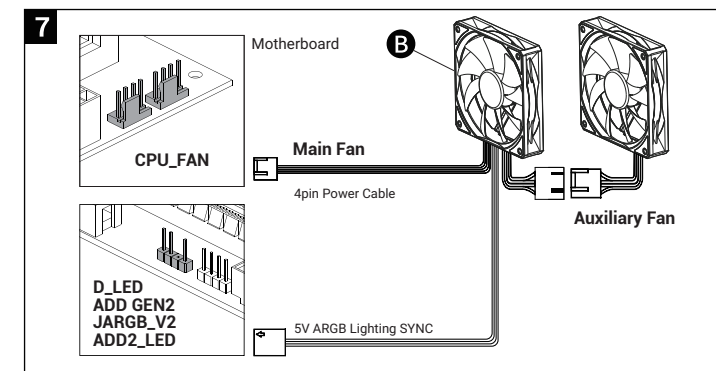


Fan and Display Connections


## AMD Accessory List

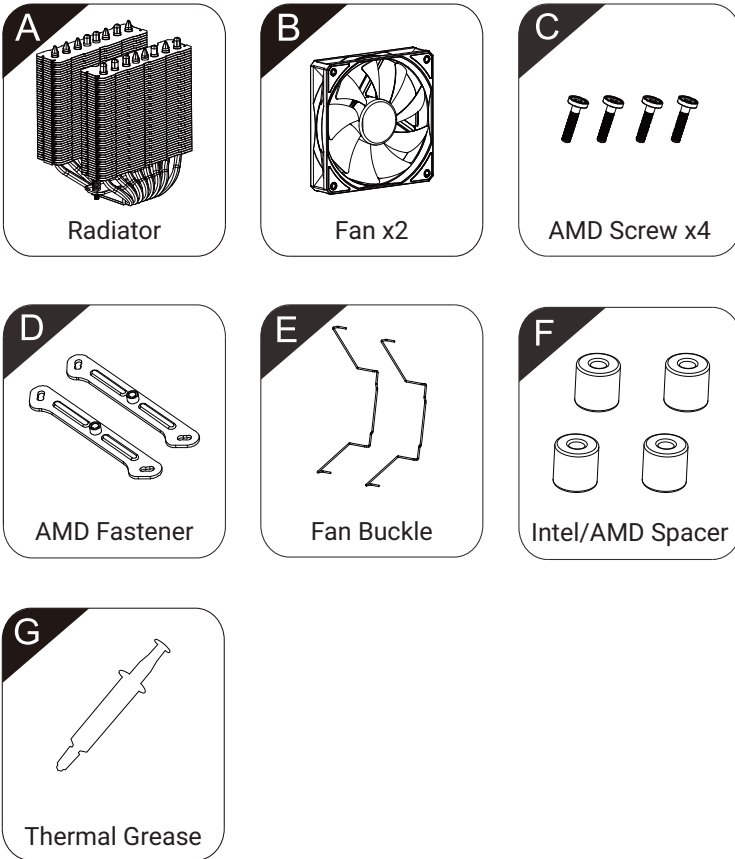

## AMD AM5/AM4

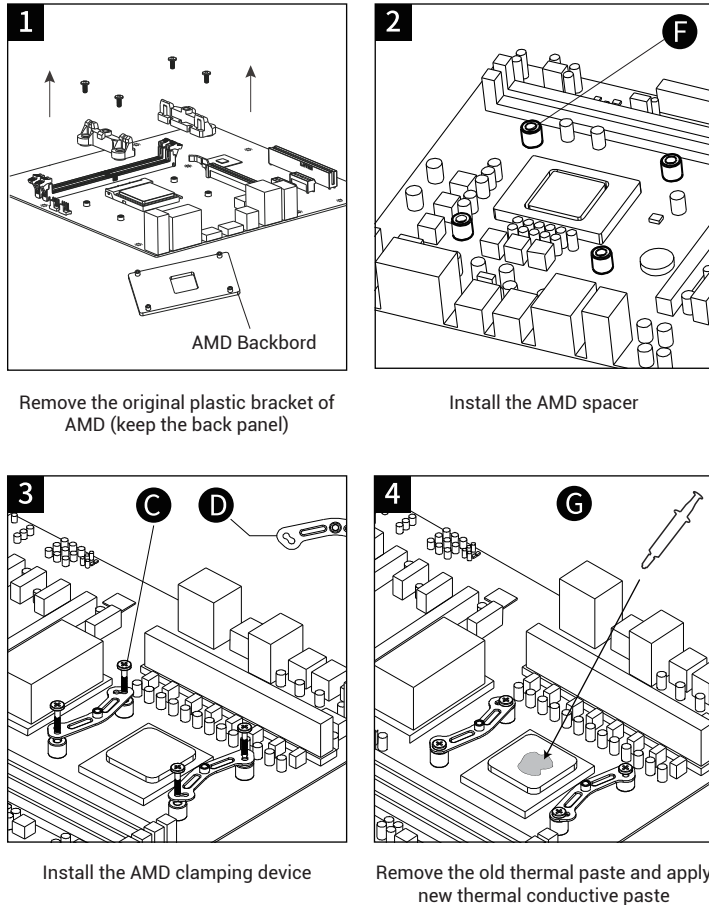

## AMD AM5/AM4

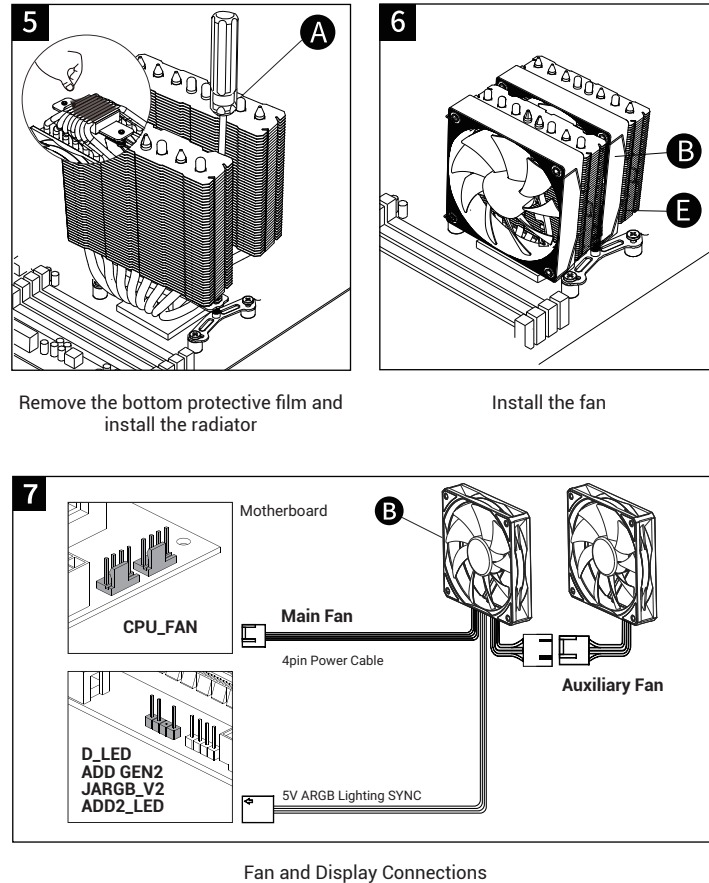

POWER UP WITH GAMEMAX

[www.gamemaxpc.com](http://www.gamemaxpc.com)