


Size: 105x148mm±0.5mm, 80g书写纸, 黑白正反印刷

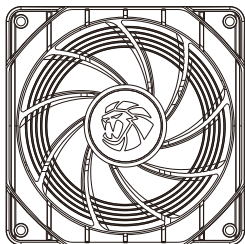

TORNADO T12 BK-R

120MM COOLING FAN USER MANUAL



×1

B



 
×4

Connect the 4-pin fan PWM connector to CPU_FAN socket on the motherboard.

4pin PWM Fan
Male Connector











4pin PWM Fan
Female Connector




CAUTION

    Please do not plug in the wrong power interface, otherwise it will burn out equipment!

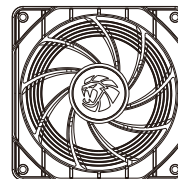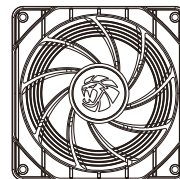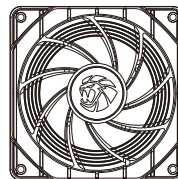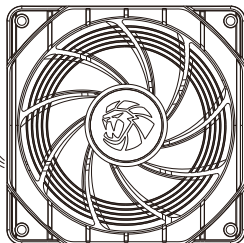

CPU Fan Header

 

HUB Fan Header

Connect the 4-pin fan PWM connector to CPU_FAN socket on the motherboard.

Please verify the amps of the fan header on the motherboard prior to connecting a series of fans to it. If the fan header is rated at 1A, a maximum of 3 fans can be utilized with that series.



POWER UP WITH GAMEMAX

www.gamemaxpc.com



G A M I N G T O T H E M A X



G A M I N G T O T H E M A X

