
GAMEMAX

140MM COOLING FAN

USER MANUAL


TORNADO T14 ARGB
TORNADO T14 ARGB-W
TORNADO T14 ARGB-R
TORNADO T14 ARGB-RW

A

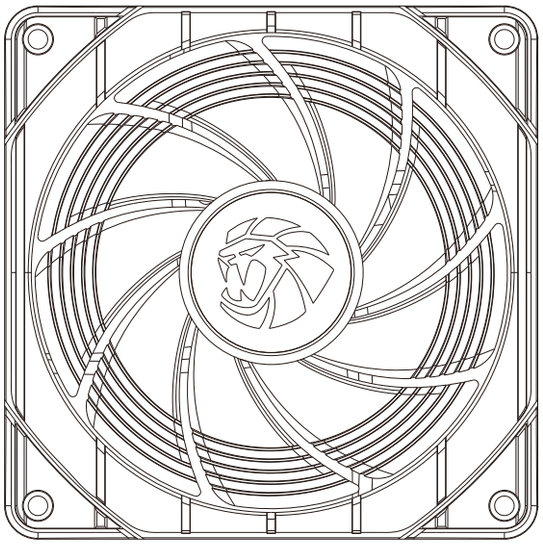


×1


B

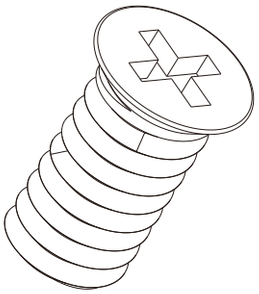

×4

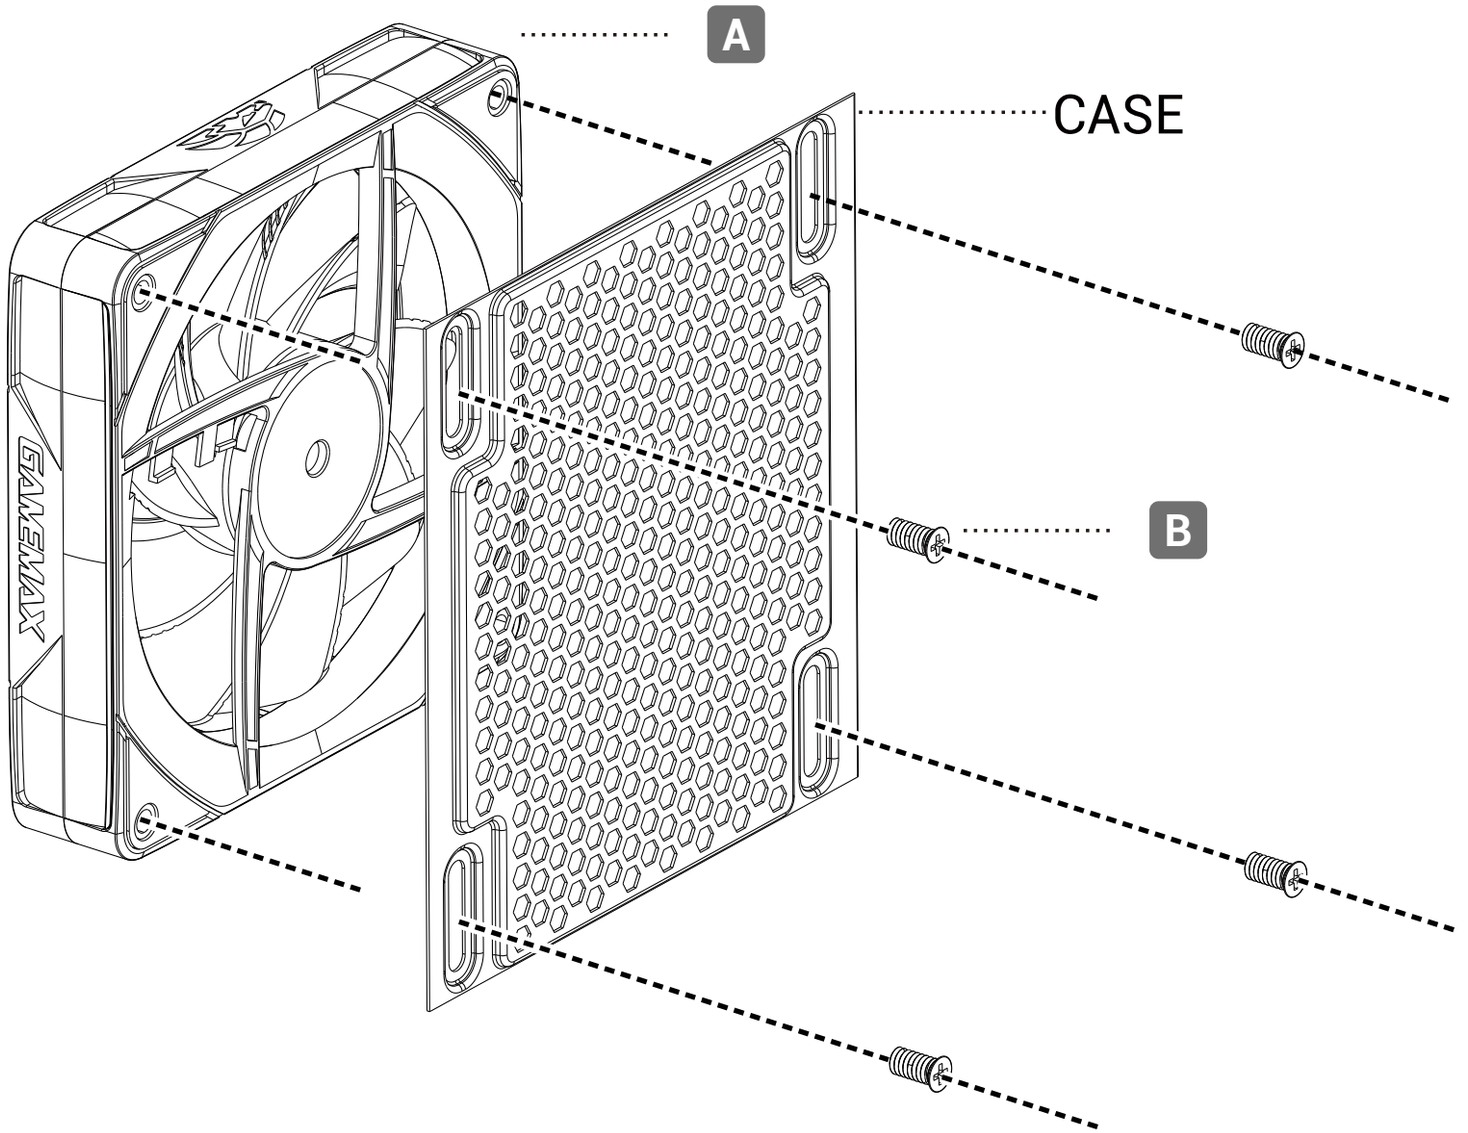
A
CASE
B
GAMEMAX


Connect the 4-pin fan PWM connector to CPU_FAN socket on the motherboard.

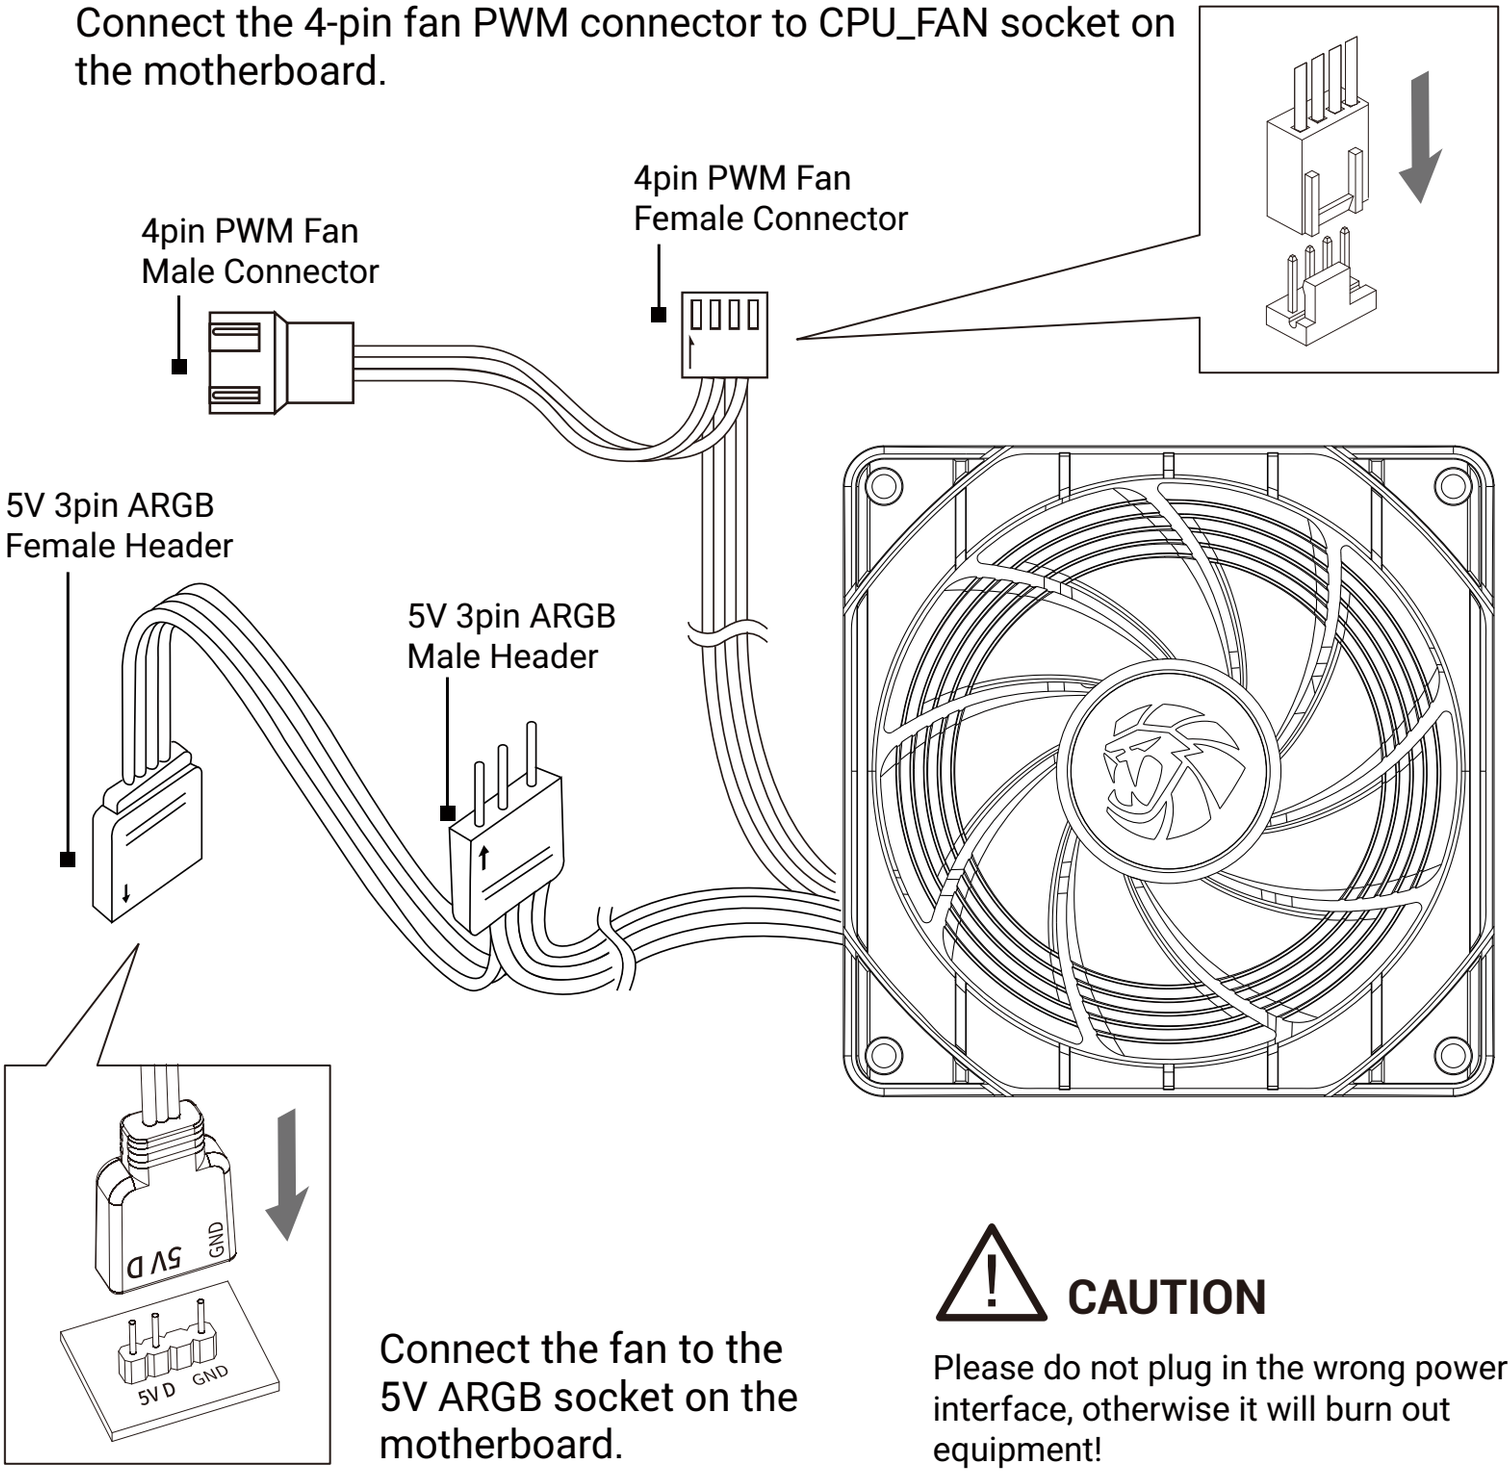


Connect the fan to the 5V ARGB socket on the motherboard.


CAUTION


Please do not plug in the wrong power interface, otherwise it will burn out equipment!

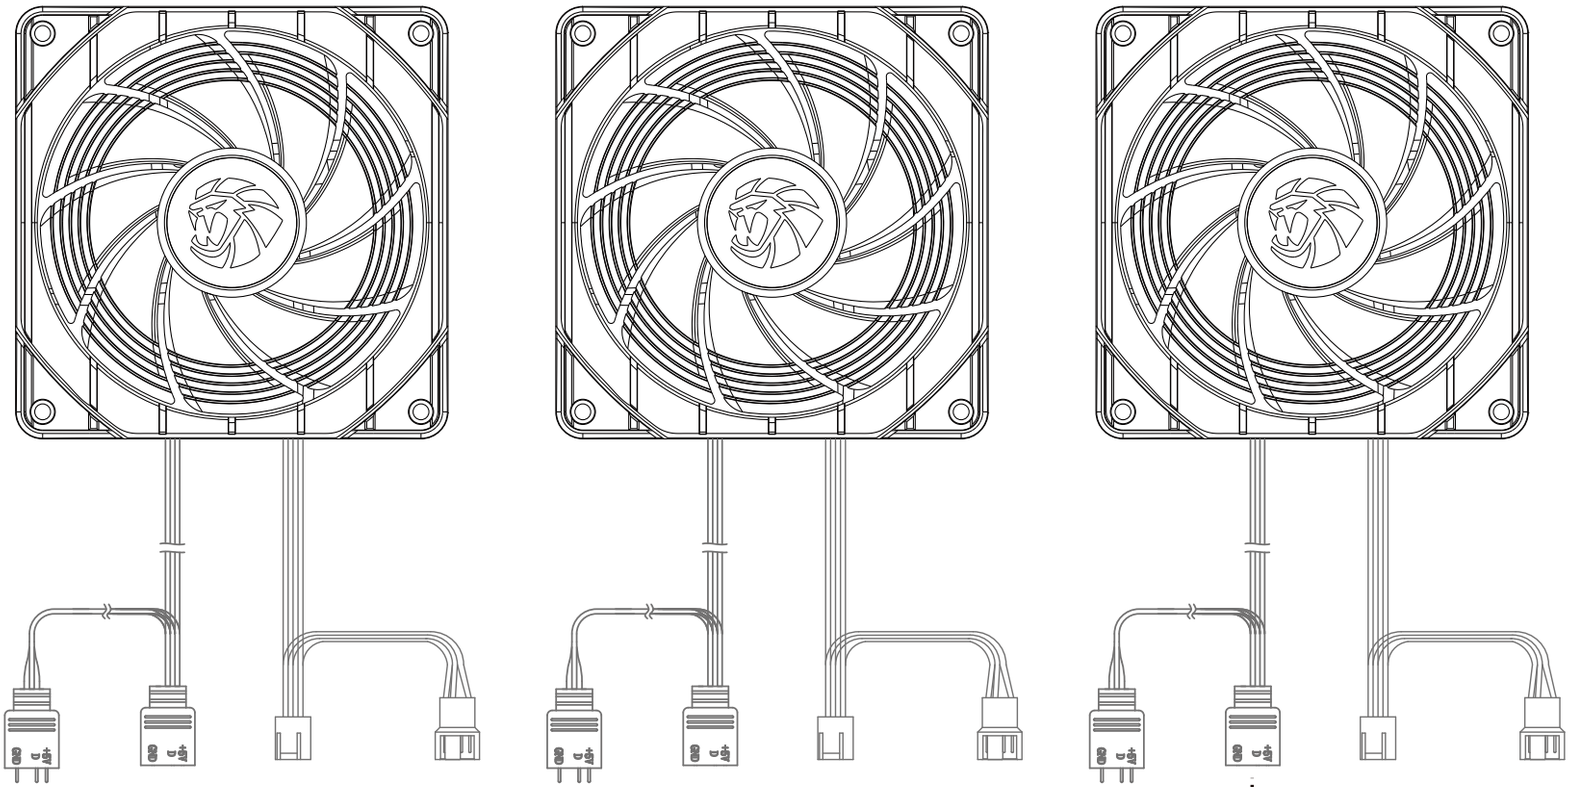

Connect the fan to the 5V ARGB socket on the motherboard.

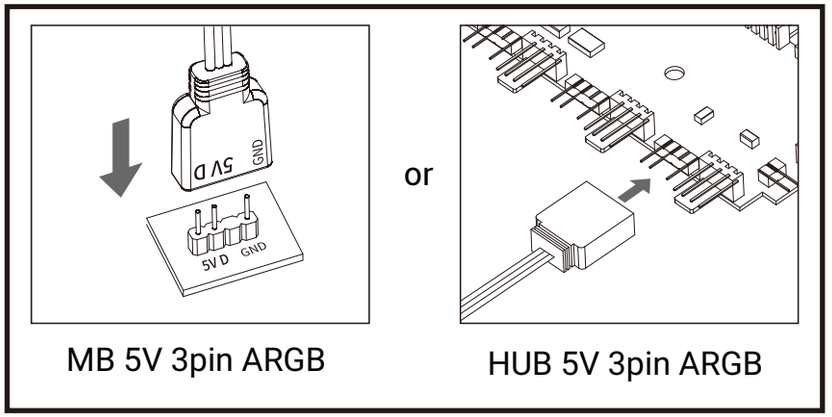

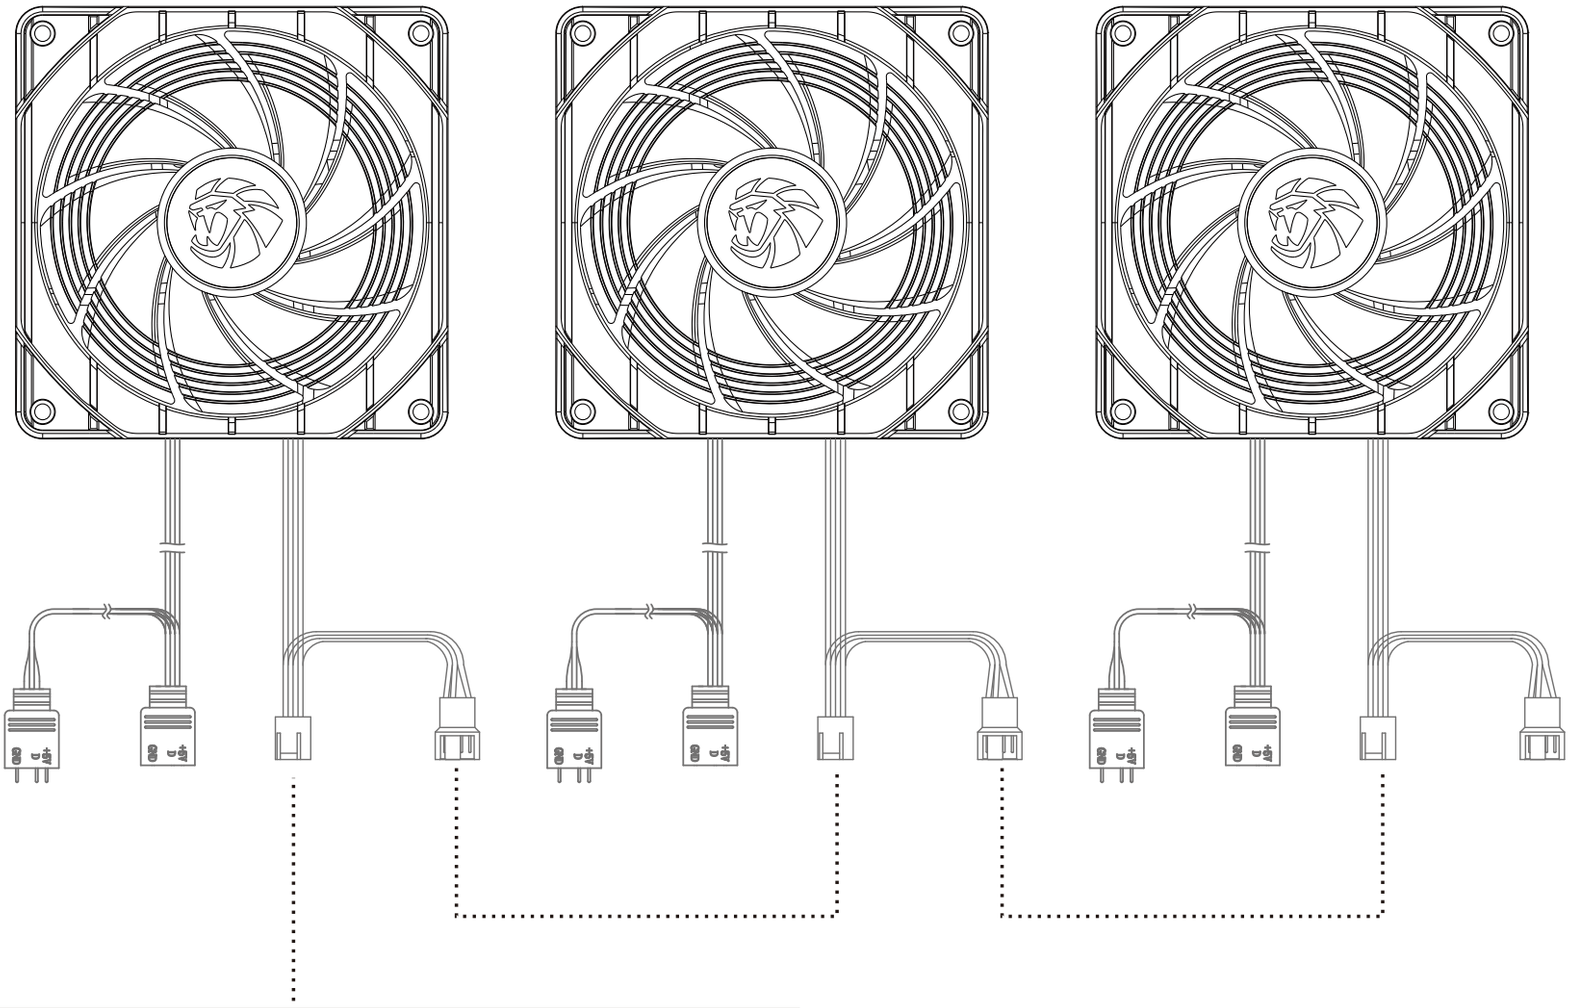

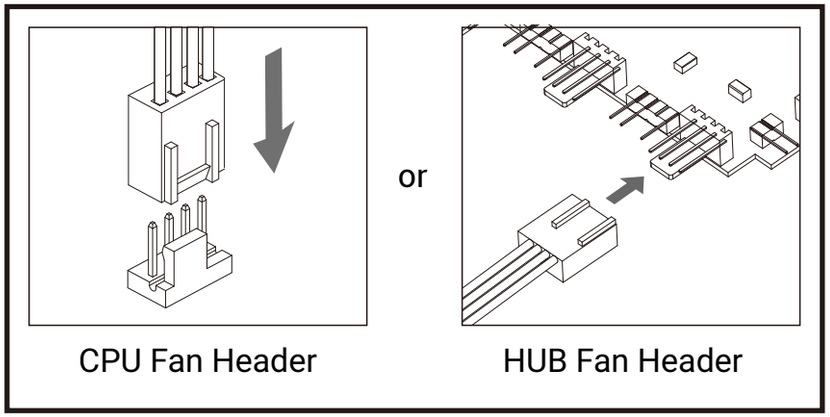

Connect the 4-pin fan PWM connector to CPU_FAN socket on the motherboard.

Please verify the amps of the fan header on the motherboard prior to connecting a series of fans to it. If the fan header is rated at 1A, a maximum of 3 fans can be utilized with that series.



POWER UP WITH GAMEMAX

www.gamemaxpc.com