


Installation Guide

PANORAMIC GLASS M-ATX PC CASE

Accessory List


 x21	 x6	 x8	 x3
Motherboard screw	The power screw	HDD screw	Copper pillar
 x1	 x1	 x3	 x3
Standoff Socket	PCIe Slot Cover	Velcro Strips	Cable ties
 x2	 x2		
16mm Plastic Clip (Transparent)	18mm Plastic Clip (Brown)		


Schematic diagram of wire interface

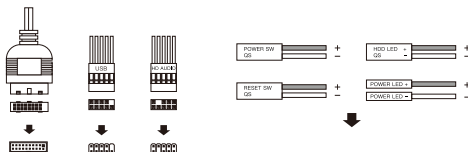

Please refer to the manual that came with your motherboard for any specific connection instructions

I/O panel introduction

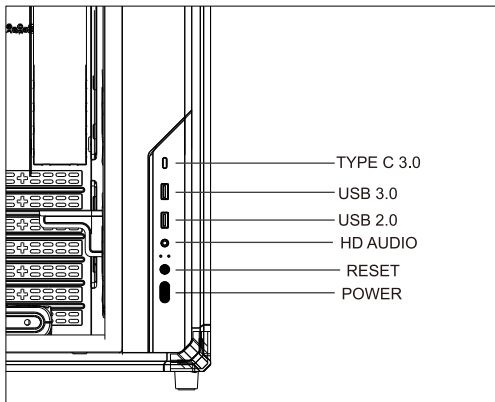


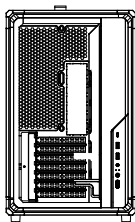


Front view




Top view

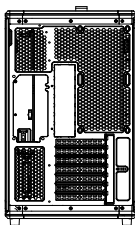


Back view

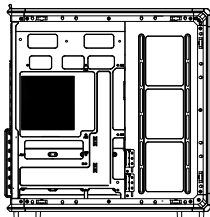

Left view (open side panel)

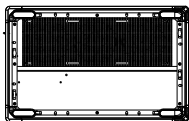


The bottom view

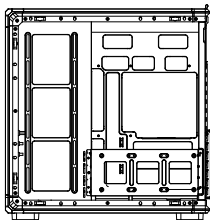


Right view (open side panel)

A

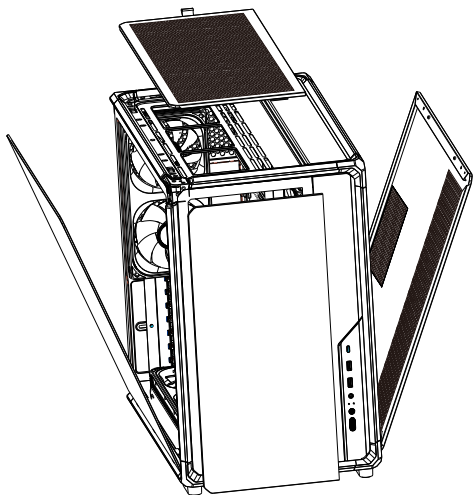


B

Remove and install side panels

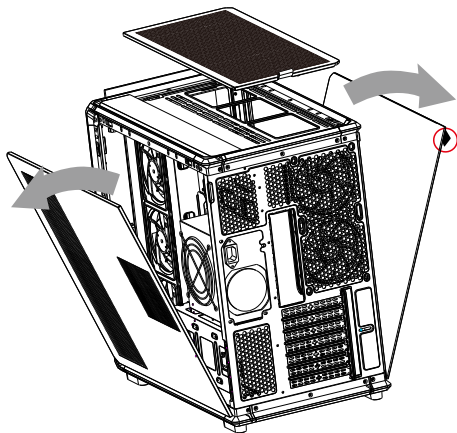

Pull the glass side panel of the metal ring to open outwards
Pull the metal side panel to open outwards.


The power supply installation

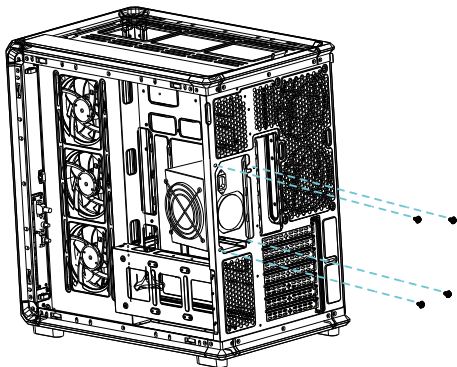

The power supply can be fixed by aligning the screw in the figure to the hole position


Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

The power supply installation

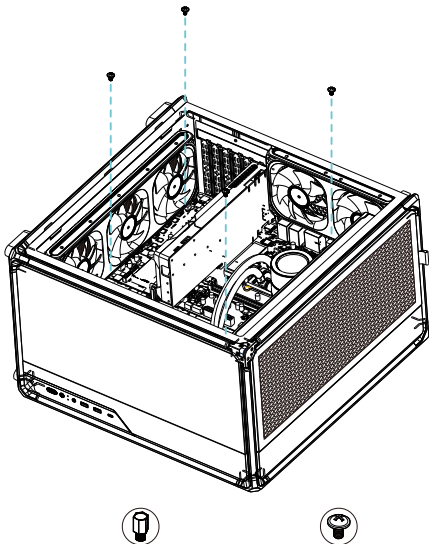

According to the motherboard type (ATX/M-ATX) the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard


Motherboard installation

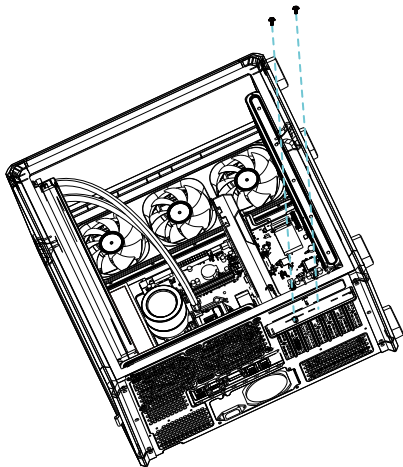

VGA length limit: 420mm


Installing a video card remove the rear protective iron plate
install the graphics card in the correct position, and lock it

Fan installation, Water cooling installation

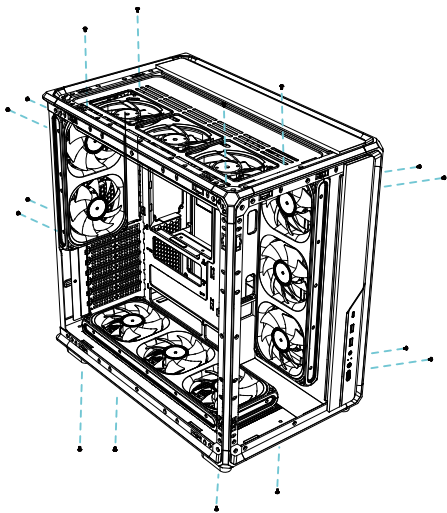

Fan Support: Left side MB 3x120mm, Top 3x120mm
Rear 2x120mm, Bottom 3x120mm

Water cooling: Left side MB 360mm, Top 360mm

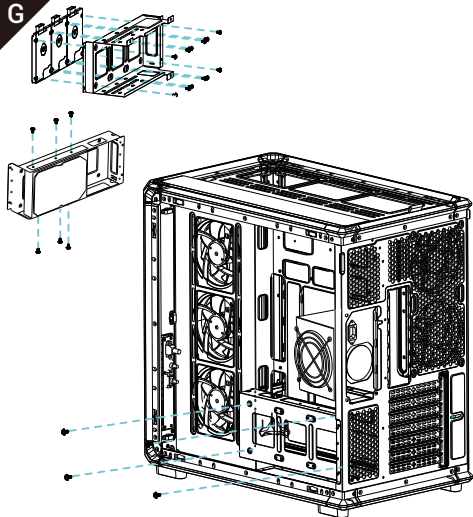
G

HDD*1
SSD*3

SSD installation, HDD installation

Remove the hard disk tray, secure the HDD and SSD to the hard disk tray, and then install the hard disk tray on the chassis

Front & Top Panels Removal, Installation, Interchange

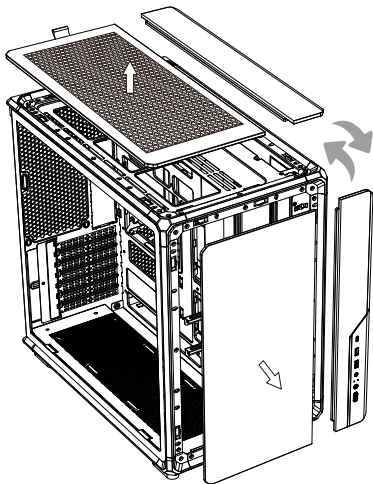


1. Remove the front glass panel and the top metal panel.
2. Detach the plastic front panel (with USB ports) and the plastic top panel.
3. Swap the positions of the two plastic panels as desired for reinstallation.

Installation of 16mm plaistic clips



16mm Plastic Clip
(Transparent)

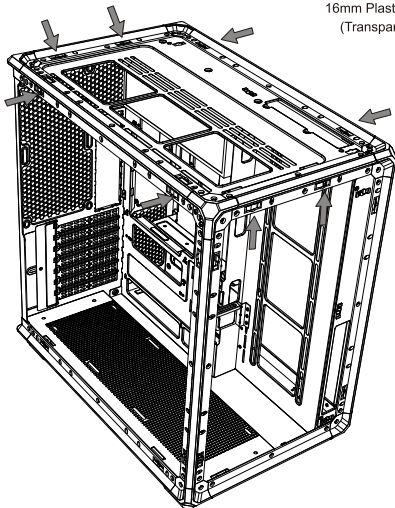


16mm transparent plastic clips installed on the plastic frame

J

Installation of 18mm plastic clips




18mm Plastic Clip
(Brown)

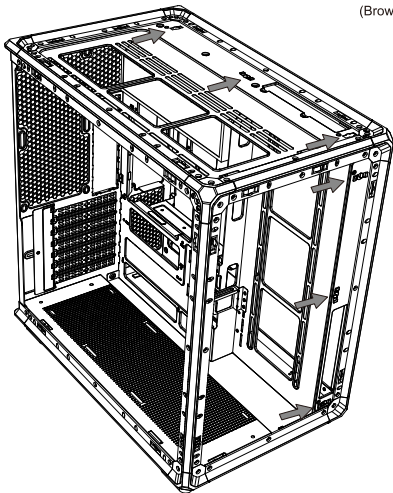

18mm brown plastic clips installed on the metal plate

V5.0 PWM ARGB HUB DEMO LINK GUIDE

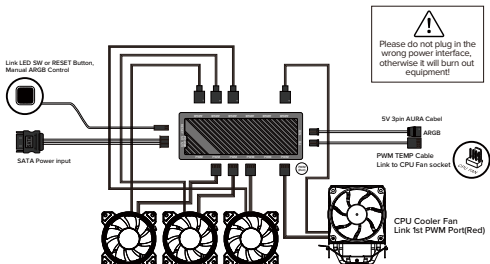

REMOTE CONTROL BUTTON FUNCTION

